



# PC 08 Effects Switch Panel

## User Manual



Order code: CONT05

## WARNING

### FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!

- Before your initial start-up, please make sure that there is no damage caused during transportation.
- Should there be any damage, consult your dealer and do not use the equipment.
- To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.
- Please note that damages caused by user modifications to this equipment are not subject to warranty.



### IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power cable come into contact with other cables. Handle the power cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the unit.
- Do not open the equipment and do not modify the unit.
- Do not connect this equipment to a dimmer pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is 120-240V AC~50/60Hz.
- Make sure that the power cable is never crimped or damaged. Check the equipment and the power cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately and have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not connect power or switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, stop use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Pro Light dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY: One year from date of purchase.

### OPERATING DETERMINATIONS

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void. Incorrect operation may lead to danger e.g: short-circuit, burns and electric shocks etc.

Do not endanger your own safety and the safety of others!

Incorrect installation or use can cause serious damage to people and/or property.


## PC 08 Effects Switch Panel

A rack mount unit allowing easy on/off control of up to 8 channels of lighting effects. Illuminated rocker switches make this unit ideal for both mobile DJ's and fixed installation use.

- 8 way switch panel
- 8 illuminated switches
- 8 x 15A IEC outlets
- 15A circuit breaker
- Max load: 15A



Specifications	
Power supply	120-240V, 50/60Hz
Load capacity	15A (with suitable connector) 13A (with UK mains plug)
Total load	240V - 3600W MAX 120V - 1800W MAX
Dimensions	48 x 484 x 115mm
Weight	1.6kg
Order code	CONT05

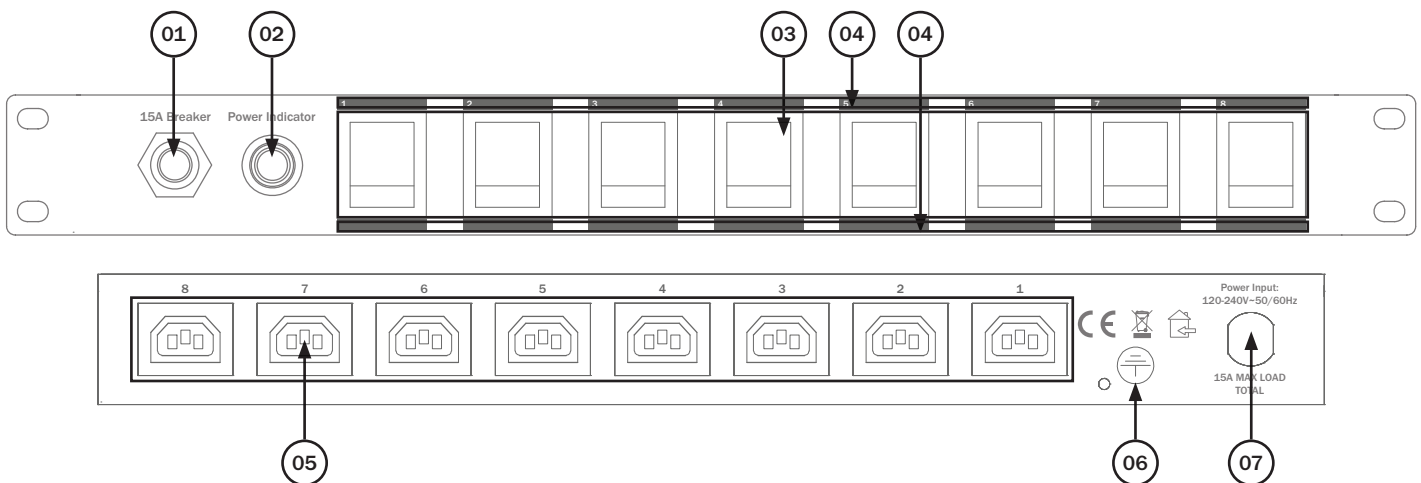

- |                      |                          |                               |
|----------------------|--------------------------|-------------------------------|
| 01 - 15A breaker     | 04 - Labelling strip     | 07 - Captive power connection |
| 02 - Power indicator | 05 - 8 x 15A IEC outputs |                               |
| 03 - On/off switches | 06 - Earth point         |                               |

In the box:  
**1 x switch panel &**  
**1 x user manual**

### Operation

This unit has been designed to independently switch ON/OFF up to eight units via the power sockets at the rear. Simply plug each unit into the appropriate socket using the correct power.

For your protection the switch panel has been fitted with a 15A circuit breaker which will disconnect the main power supply from the outputs should you overload the panel or if there is a power surge. To continue to use the panel switch off all 8 switches on the front panel then press the reset button to reactivate the power.

The switch panel is also fitted with a power indicator neon on the front panel. Should the 15A resettable breaker activate, the power indicator will fail to illuminate. Press to the reset the 15A breaker.

## Installation

This switch panel may either be used on a level surface or mounted into an appropriate 19" rack cabinet. For safety the unit is best installed into a secure area where the cables cannot be pulled out of the panel.



### ***Correct Disposal of this Product (Waste Electrical & Electronic Equipment)***

**(Applicable in the European Union and other European countries  
with separate collection systems)**

This marking shown on the product or its literature, indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

