# elumen8



# 100W LED Alu Tri User Manual

Code: ELUM041B

# WARNING

# FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!



# SAFETY INSTRUCTIONS

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual



Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

# **IMPORTANT:**

# The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- · Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 220v/240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY; One year from date of purchase.

# **OPERATING DETERMINATIONS**

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.

Do not endanger your own safety and the safety of others! Incorrect installation or use can cause serious damage to people and property.

# These fixtures are not designed to be used as house lights or left on for prolonged periods.

#### Overview:

You should find inside the Elumen8 carton the following items:

1, 100W LED Alu Tri

2, Instruction manual,

3, Power Cable

#### **Technical Specifications:**

DMX channels: 3 or 5 selectable 1 x 100W tri-colour LED Static colour, colour change, colour fade, sound active, master/slave and DMX modes 400Hz refresh rate 5-pin XLR in/out sockets 4 push button menu with LCD display PowerCON in socket Beam angle: 60 degrees Power supply: 100-240V-50/60HZ Power consumption: 147W Dimensions: 300 x 270 x 222mm Weight: 4.2Kgs

Operating modes:

- 1, Static colour 2, Colour change
  - 3, Colour fade
  - 4, Channel select
  - 5. DMX
  - 6, Master/slave
  - 7, Sound active

Overview:



#### **Operation:**

#### 1, Built-in programmes mode

Within this option there are four different modes to choose from, please see below on how to access each one.

#### Static colour

To enter the static colour mode, press the "**MODE**" button to show "**1.STATIC**" on the LCD display. Now press the "**ENTER**" button twice to access the first colour and use the "**UP**" and "**DOWN**" buttons to set the brightness. Now press the "**ENTER**" button again to set the second colour and so on for the third colour. Press the "**ENTER**" button a fourth time to add strobe using the "**UP**" and "**DOWN**" buttons to change the speed.

#### NOTE: R = Red: 00-99, G = Green: 00-99, B = Blue: 00-99, F = Strobe: 00-99

#### Examples: If you set R, G and B to zero, the 100W LED Alu Tri will have no LEDs on (blackout). If you set R to 99 and G and B to zero, the 100W LED Alu Tri will be 100% Red.

#### NOTE: For static selection of Red, Green, or Blue, ensure that the unwanted colours are set to "00".

Press the "ENTER" button to confirm it.

#### 7 Colour change, 3 colour change and colour fade modes

From being in the above mode, to switch between the 7 or 3 colour change and colour fade modes, press the **"ENTER**" button and use the **"UP"** and **"DOWN**" buttons to select between them. To change the speed of your selected choice, press the **"ENTER**" button and use the **"UP"** and **"DOWN**" buttons to adjust the speed value. Now press the **"ENTER**" button a third time to adjust the strobe speed using the **"UP"** and **"DOWN**" buttons.

#### NOTE: Speed values: 00-99 (00=slow, 99=fast), Strobe values: 00-99 (00=slow, 99=fast).

#### 2, Channel Mode

To enter the channel mode, press the mode button to show "CHANNEL" on the LCD display. Now press the "ENTER" button and use the "UP" and "DOWN" buttons to select 3 or 5 channel mode, press the "ENTER" button to confirm it.

#### 3, DMX Mode

To enter the DMX mode, press the "**MODE**" button to show "**DMX MODE**" on the LCD display. Now press the "**ENTER**" button and use the "**UP**" and "**DOWN**" buttons to select the DMX address from 001-512, press the "**ENTER**" button to confirm it.

#### 4, Slave Mode

To enter slave mode, press the "**MODE**" button to show "**SLAVE MODE**" on the LCD display. Now the unit will follow in sequence with the master unit.

### 5, Sound active mode

To enter the Sound Active mode, press the "MODE" button to show "SOUND" on the LCD display. Now press the "ENTER" button and use the "UP" and "DOWN" buttons to select the sensitivity level.

#### NOTE: Sensitivity levels: 00-99 (00=low 99=high).

Press the "ENTER" button to confirm it.

# DMX Charts

3 channel chart:

Channel	Value	Function
CH1	0-255	Red 0-100%
CH2	0-255	Green 0-100%
CH3	0-255	Blue 0-100%

5 channel chart

Channel	Value	Function
CH1	0-255	Red
CH2	0-255	Green
CH3	0-255	Blue
CH4	0-255	Master dimmer 0-100%
CH5	0	Blackout
	1-5	7 colour sound active
	6-10	On (as per settings from CH1, 2, 3 and 4)
	11-255	Strobe (slow to fast)

#### DMX-512:

 DMX (Digital Multiplex) is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions form the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a data "out" terminal).

#### DMX Linking:

• DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned to a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX address of 3, the DMX address to 4 be the shortest to that unit, no matter where it is located in the DMX chain.

#### DATA Cable (DMX cable) requirements (for DMX operation):

• The 100W LED Alu Tri can be controlled via DMX-512 protocol. The DMX address is set on the back of the unit. Your unit and your DMX controller require a standard 5-pin XLR connector for data input/output.

#### Notice:

• Be sure to follow figures 2 & 3 when making your own cables. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behaviour.



#### Special Note: Line termination:

When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.



#### Using a cable terminator (part number CABL90) will decrease the possibilities of erratic behaviour.

#### 5-Pin XLR DMX Connectors:

 Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-Pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The Chart below details the correct cable conversion.



