

OPERATION MANUAL


INTRODUCTION:

This model is designed for Disco Stager, Mobile, Neon advertising signboard. It is a 4 channels chaser, consisting of 16 preset patterns, Auto/Manual/Music chase of patterns, FULL ON and STAND-BY functions.


SPECIFICATIONS:

POWER INPUT..... AC 230V~50Hz, 16A
CHANNEL OUTPUT 0.05A-5A per channel, Total 16A max.
CHANNEL FUSE..... F6.3A 250V 20x5mm
DIMENSIONS 325x175x61mm
WEIGHT 1.8 Kgs

CONTROLS & FUNCTIONS

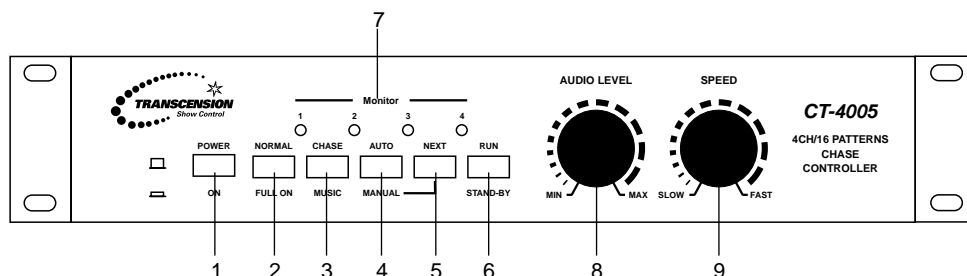

- 1. POWER SWITCH**
- 2. FULL ON / NORMAL BUTTON**
Press the button to IN, it is in FULL ON mode;
press the button to OUT, it is in NORMAL mode.
- 3. CHASE / MUSIC BUTTON**
Press the button to IN, the chase of program is triggered by music
Press the button to OUT, the chase is controlled by auto speed
- 4. MANUAL / AUTO BUTTON**
Press the button to IN, MANUAL is activated.
Press the button to OUT, AUTO is activated.
- 5. NEXT BUTTON**
The button is effective in manual mode, you can advance program step by step.
- 6. STAND-BY/RUN BUTTON**
Press this button to IN, all output is paused unless FULL ON is activated ,
Press this button to OUT, it resume NORMAL mode.
- 7. CHANNEL OUTPUT LED**
It is lit when corresponding channel is turned on.
- 8. AUDIO LEVER CONTROL**
This control adjusts the sensitivity of the music detected by the built-in microphone.
- 9. SPEED CONTROL**
This control adjusts the flash speed of strobe.
- 10. CHANNEL OUTPUT(Located on the rear side)**
0.05A-5A/CH., TOTAL 16A max.

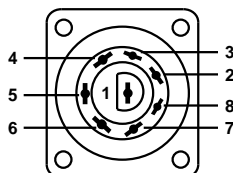

PIN ARRANGEMENT			
1	⊥ E	5	CH-4
2	CH-1	6	N
3	CH-2	7	N
4	CH-3	8	N

WARNING!!!

- 1. THIS APPARATUS MUST BE EARTHED.**
- 2. DISCONNECT POWER CABLE BEFORE OPENING.**
- 3. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.**
- 4. REPLACE THE FUSE WITH THE SAME TYPE.**



24-004-0909
Rev 1.0

Web site: www.prolight.co.uk
E-mail: sales@prolight.co.uk