
User Manual

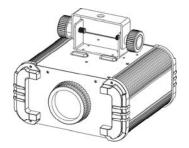

LED-WAV-10W

Please read this user manual carefully and follow the instructions to avoid danger or damage to the unit due to mishandling.

A. Safety Introductions

- Please keep this User Manual for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- Unpack and check carefully there is no transportation damage before using the unit.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Disconnect mains power before replacement or servicing.
- Replace only with the same type.
- Make sure there are not flammable materials close to the unit while operating, as it is fire hazard.
- Use safety cable when fixes this unit.
- In the event of serious operating problem, stop using the unit immediately. Never try to
 repair the unit by yourself. Repair carried out by unskilled people can lead to damage or
 malfunction. Please contact the nearest authorized technical assistance center and
 always use the same type spare parts.

Warnings

- Always remember to unplug the unit from the main power before any service is done.
- There are no user serviceable parts inside.
- Qualified personnel should do Service only.
- Do not touch any wires during operation.
- Do not touch the unit barehanded during operation.

B. Product Items

 
- User manual
- 60° lens

C. Installation

You can install the unit on the truss or ceiling; Use clamps to fix the unit to truss. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure. Also always use a safety cable that can hold 10 times of the weight of the unit when installing the fixture.

D. Replace the lens

You could replace the other lens if you want to, as following picture.



You should screw the lens roller to take it down as NO.1, and bring the lens out as No.2. Then you could replace the lens that you want to.

Notes: the lens roller has two slots for the lens; you should pay more attention that the latest slot is for the 34° lens, and the far slot is for 60° lens.

E. Feature

- 1. The latest LED technology and high efficient optical system, the LED wave delivers bright, vivid water wave effects, creating romantic atmosphere.
- 2. Equipped with 2 effect wheels and 1 independent dichotic color wheel
- 3.5 colors +white-Magenta/Yellow/Blue/Green/Orange/White
- 4. Focus adjustable, ideal for background projection
- 5. Perfect for clubs, bars, parties, restaurants etc.

F. Technical Specification

Operation mode: rotation or stillness Power consumption: 20W Voltage: AC100V~50/60Hz, 120V~60Hz or 230/240/250V~50Hz Fuse: T 500mA Dimension: 222 x 229 x 187 mm Weight: 3.5kgs



The fixture does not work

- 1. Check the connection of power and main fuse.
- 2. Measure the mains voltage on the main connector.

