

EQUINOX

Waterwave XP

User Manual



Order code: EQLED373

WARNING

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!

- Before your initial start-up, please make sure that there is no damage caused during transportation.
- Should there be any damage, consult your dealer and do not use the equipment.
- To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.
- Please note that damages caused by user modifications to this equipment are not subject to warranty.



IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power cable come into contact with other cables. Handle the power cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the unit.
- Do not open the equipment and do not modify the unit.
- Do not connect this equipment to a dimmer pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available mains supply voltage is between 100~240V AC, 50/60Hz.
- Make sure that the power cable is never crimped or damaged. Check the equipment and the power cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately and have a qualified engineer inspect the equipment before operating again.
- This unit is not intended for fixed installation.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not connect power or switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, stop use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Pro Light dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. **THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.**
- This lighting fixture is for professional use only - it is not designed for or suitable for household use. The product must be installed by a qualified technician in accordance with local territory regulations. The safety of the installation is the responsibility of the installer. The fixture presents risks of severe injury or death due to fire hazards, electric shock and falls.
- Warning! Risk Group 2 LED product according to EN 62471. Do not view the light output with optical instruments or any device that may concentrate the beam.
- **WARRANTY:** One year from date of purchase.

OPERATING DETERMINATIONS

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void. Incorrect operation may lead to danger e.g: short-circuit, burns and electric shocks etc.

Do not endanger your own safety and the safety of others!

Incorrect installation or use can cause serious damage to people and/or property.

Please note: These fixtures are intended for stage lighting and entertainment applications only, and are not intended for extended periods of use, including but not limited to house-light, industrial or architectural applications and should only be operated with short duty cycles.



Waterwave XP


The Waterwave XP is a high-output multi-coloured rippling water effect, powered by a 100W LED and featuring an internal colour wheel generating 5 rich vibrant single and split colours plus open. This atmospheric effect comes supplied with 2 interchangeable lens cones creating a unique visual projection, to either fill a venue (60°) or produce a narrower effect (34°), ideal for bars and restaurants as well as marquees, shows or other events.

- 1 x 100W white LED
- Beam angle: 34° and 60° via supplied lenses
- Manual focus
- DMX channels: 3
- Manual, sound active and master/slave modes plus built-in programs
- 0-100% dimming and variable strobe
- 4 push button menu with LED display
- IEC power input/output
- 3-pin XLR input/output
- Fan cooled
- Supplied with hanging bracket



Specifications	
Power consumption	110W
Power supply	100~240V, 50/60Hz
Fuse	F3A 250V
Dimensions	225 x 286 x 245mm
Weight	3.8kg
Order code	EQLED373

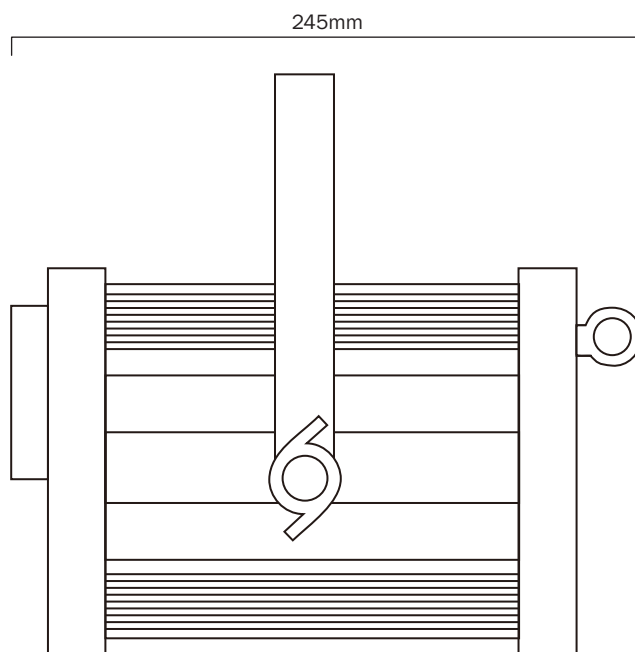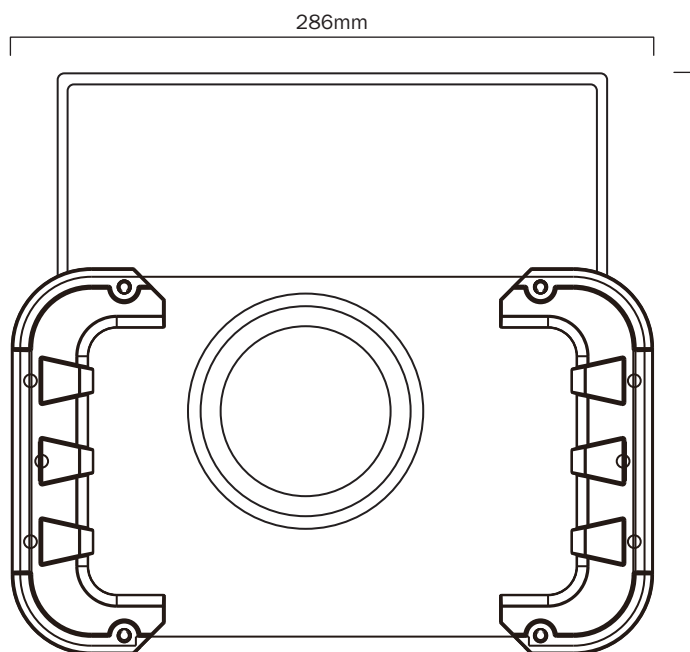

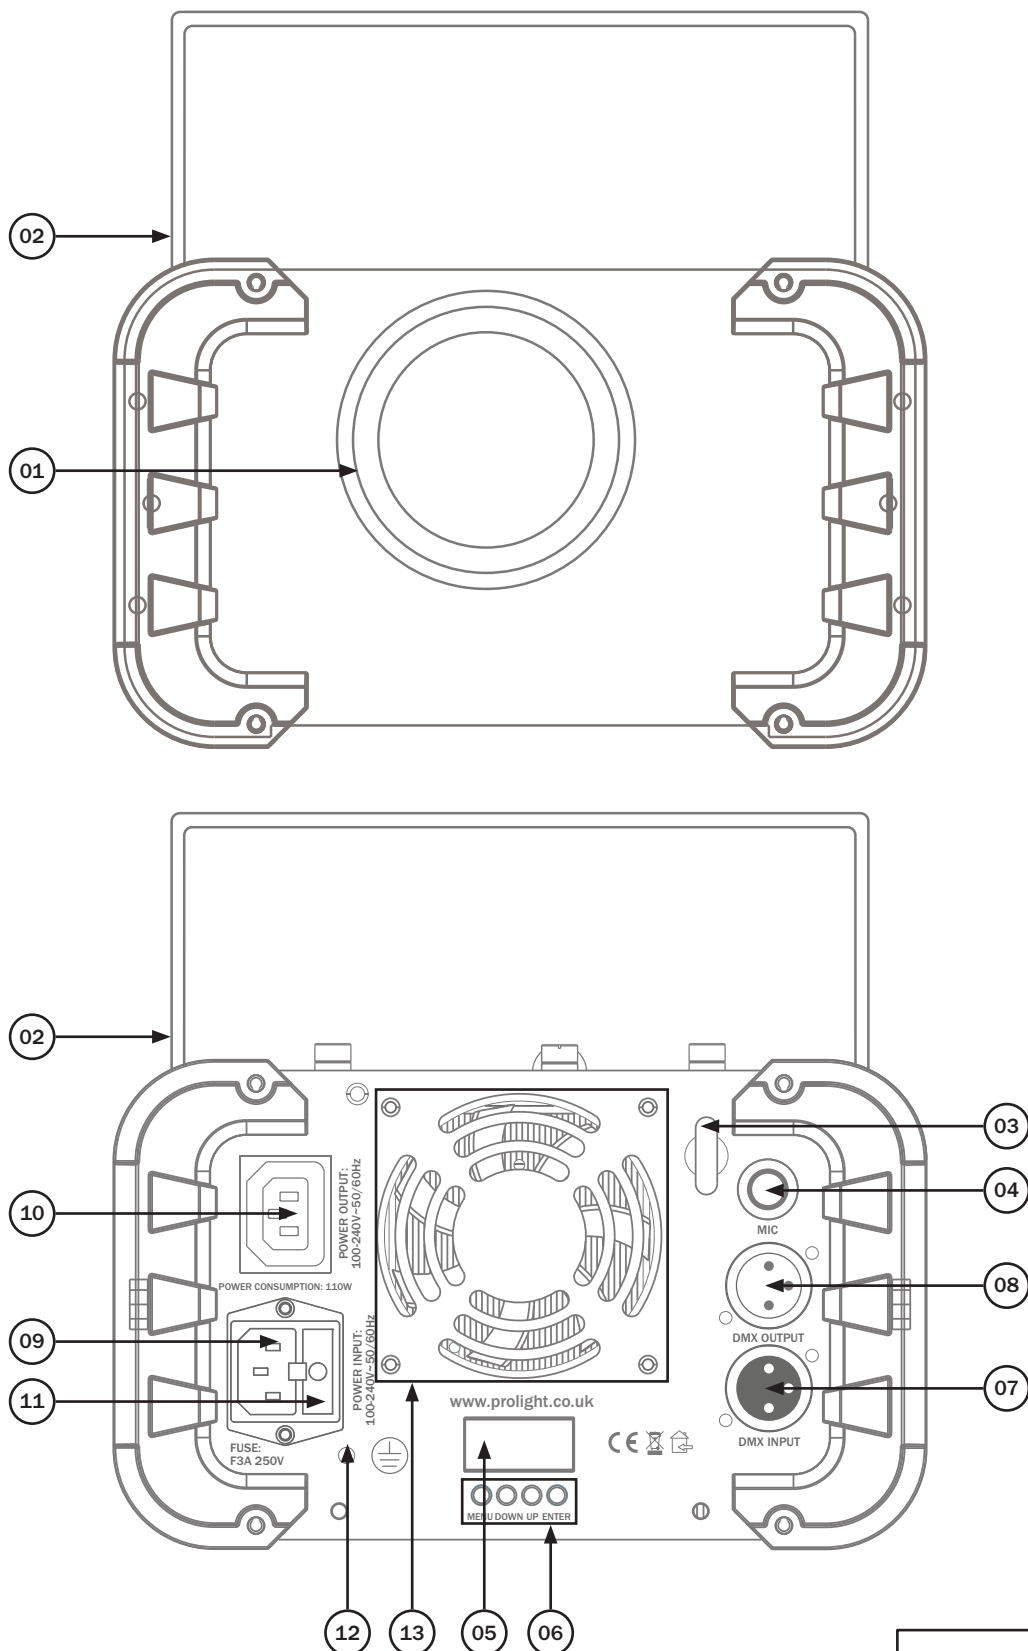


01 - Manual focus
02 - Hanging bracket
03 - Safety eye
04 - Microphone

05 - LED display
06 - Function buttons
07 - 3-Pin DMX input
08 - 3-Pin DMX output

09 - IEC power input
10 - IEC power output
11 - Fuse F3A 250V
12 - Earth point

13 - Fan

In the box: **1 x fixture,**
1 x 34° lens cone,
1 x 60° lens cone,
1 x power cable,
& 1 x user manual

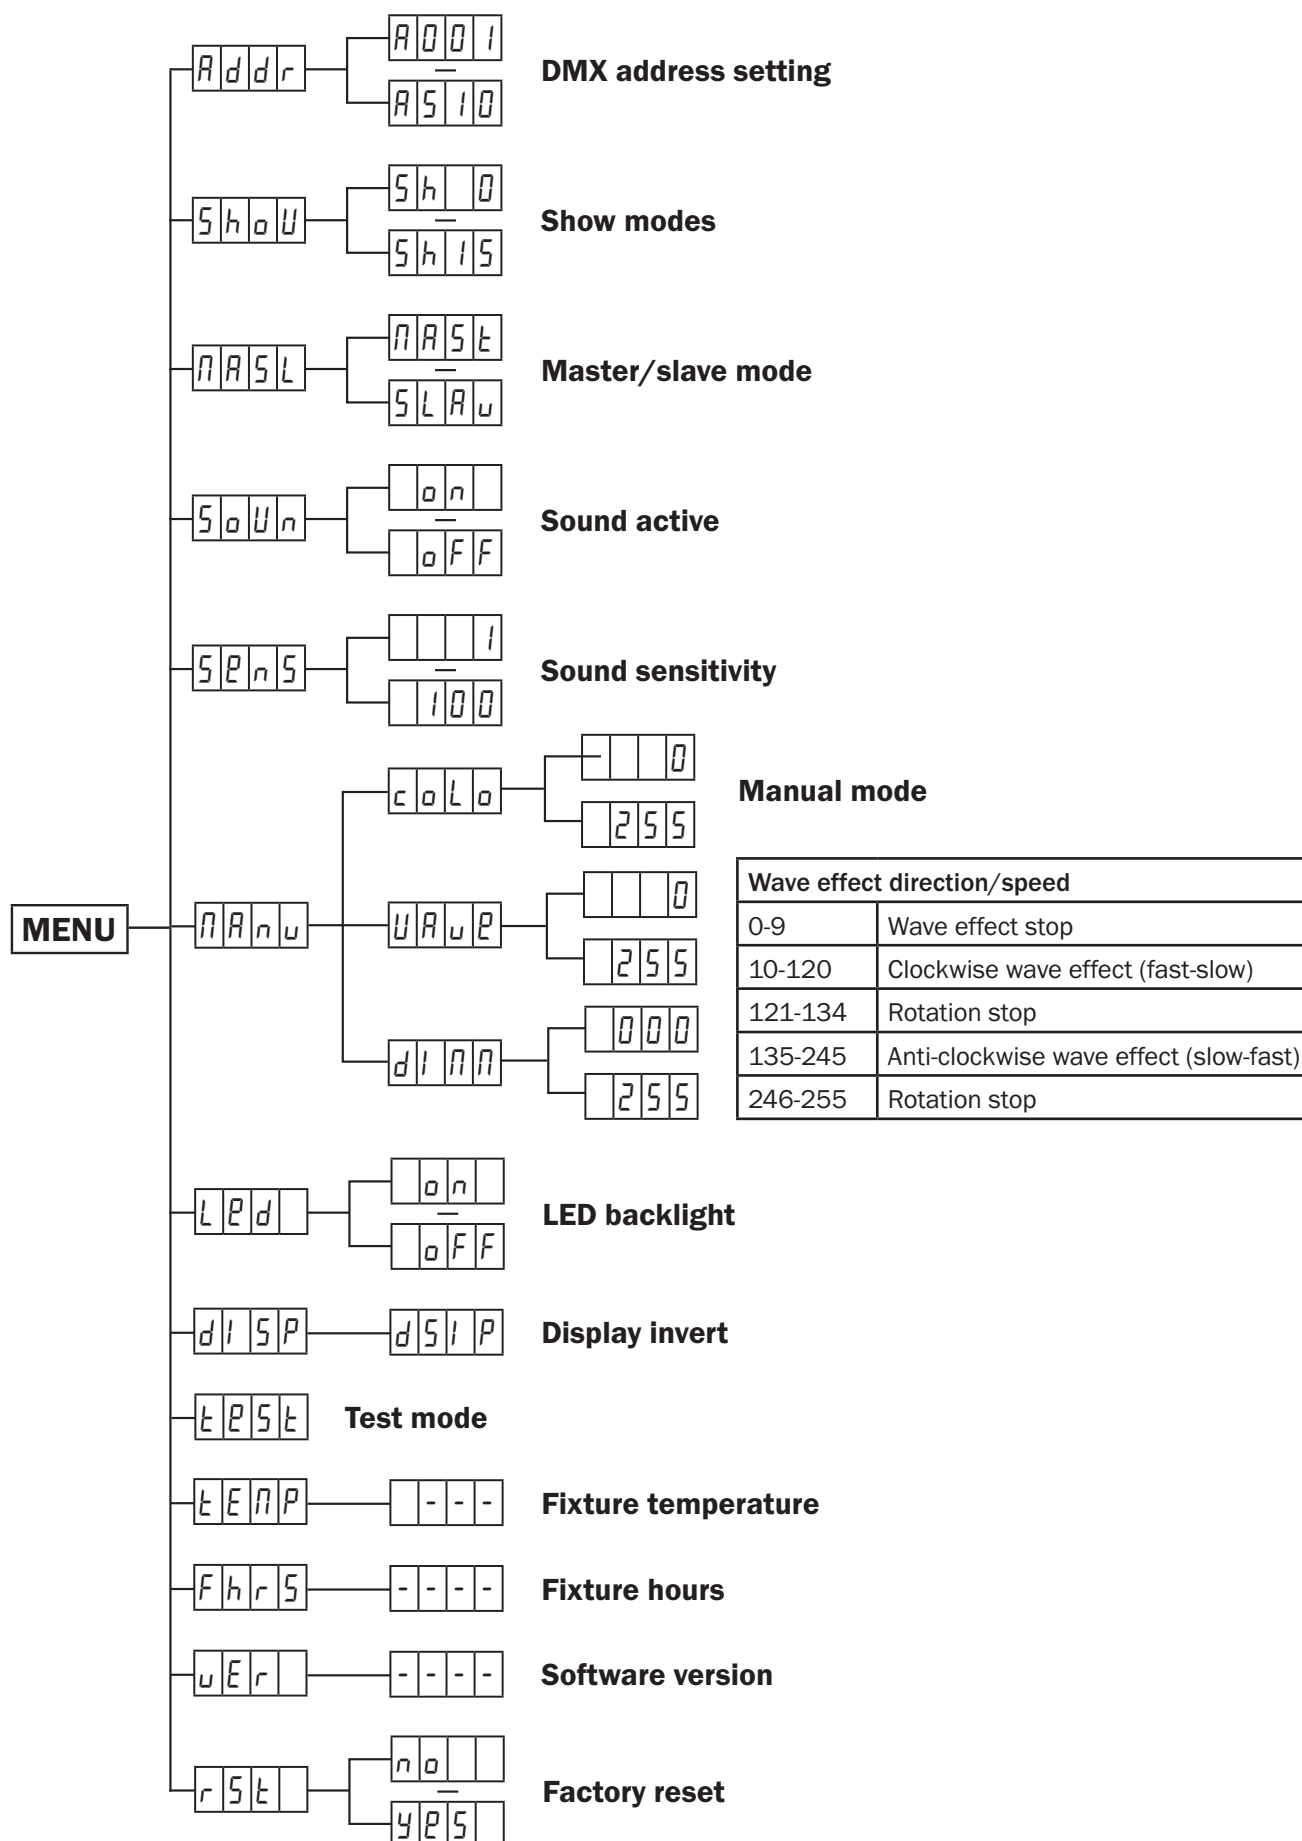

DMX mode:

Operating in a DMX control mode environment gives the user the greatest flexibility when it comes to customising or creating a show. In this mode you will be able to control each individual trait of the fixture and each fixture independently.

To access the DMX address mode, press the “**MENU**” button and use the “**UP**” and “**DOWN**” buttons to show *Addr* on the LED display. Now press the “**ENTER**”, this will show *ADD 1* and you can now press the “**UP**” and “**DOWN**” buttons to set the required DMX address from *ADD 1* to *AS 10*. Press the “**ENTER**” button to confirm the setting.

To exit out of any of the above options, press the “**MENU**” button.

3 channel mode:

Channel	Function	Value	Function
CH1	Dimmer	000-255	Master dimmer (0-100%) with sound active
CH2	Wave effect direction/speed	000-010	Stop
		011-120	Clockwise (fast to slow)
		121-134	Stop
		135-245	Anti- clockwise (slow to fast)
		246-255	Stop
CH3	Colour wheel/speed	000-009	White
		010-021	White + Red
		022-032	Red
		033-043	Red + Green
		044-054	Green
		055-065	Green + Blue
		066-076	Blue
		077-087	Blue + Amber
		088-098	Amber
		099-109	Amber + UV
		110-120	UV
		121-127	UV + White
		128-187	Clockwise (fast to slow)
		188-196	Stop
		197-255	Anti-clockwise (slow to fast)

Show mode:

To access the show modes, press the “MENU” button and use the “UP” and “DOWN” buttons to show *ShoU* on the LED display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to select between *Sh 0 ~ Sh 15*. Press the “ENTER” button to confirm the setting.

To exit out of any of the above options, press the “MENU” button.

Master/slave mode:

To set the master unit, press the “MENU” button and use the “UP” and “DOWN” buttons to show *MASt* on the LED display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to select *MASt*. Press the “ENTER” button to confirm the setting.

Then select your desired program.

To set the other units in slave mode, press the “MENU” button and use the “UP” and “DOWN” buttons to show *MASt* on the LED display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to select *SLAv*. Press the “ENTER” button to confirm the setting.

The unit will now run in sequence with the master unit.

To exit out of any of the above options, press the “MENU” button.

Please ensure that all slave units are set to the same DMX channel mode as the master unit.

Sound active:

To access the sound active setting, press the “MENU” button and use the “UP” and “DOWN” buttons to show *SoUn* on the LED display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to choose between *on* or *oFF*. Press the “ENTER” button to confirm the setting.

To exit out of any of the above options, press the “MENU” button.

Sound sensitivity:

To adjust the sound sensitivity, press the “MENU” button and use the “UP” and “DOWN” buttons to show *SeNs* on the LED display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to select between *1 ~ 100*. Press the “ENTER” button to confirm the setting.

Value: 1 - 100 (1 = low, 100 = high)

To exit out of any of the above options, press the “MENU” button.

Manual mode:

To access the manual mode, press the “MENU” button and use the “UP” and “DOWN” buttons to show *MANU* on the LED display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to select the between *COLO* (colour), *WAVE* (wave effect direction/speed) or *DI NN* (master dimmer). Now press the “ENTER” button and use the “UP” and “DOWN” buttons to select between *0 ~ 255*. Press the “ENTER” button to confirm the setting.

(See page 5 for wave effect direction/speed values).

To exit out of any of the above options, press the “MENU” button.

LED backlight:

To access the LED backlight setting, press the “**MENU**” button and use the “**UP**” and “**DOWN**” buttons to show **L P d** on the LED display. Now press the “**ENTER**” button and use the “**UP**” and “**DOWN**” buttons to select between **o n** or **o F F**. Press the “**ENTER**” button to confirm the setting.

To exit out of any of the above options, press the “**MENU**” button.

Display invert setting:

To access the display invert setting, press the “**MENU**” button and use the “**UP**” and “**DOWN**” buttons to show **d I S P** on the LED display. Now press the “**ENTER**” button to display **d S I P**.

To exit out of any of the above options, press the “**MENU**” button.

Test mode:

To access the fixtures test mode, press the “**MENU**” button and use the “**UP**” and “**DOWN**” buttons to show **t P S t** on the LED display. Now press the “**ENTER**” button.

The unit will now run its test mode.

To exit out of any of the above options, press the “**MENU**” button.

Fixture temperature:

To display the fixtures temperature, press the “**MENU**” button and use the “**UP**” and “**DOWN**” buttons to show **t P n P** on the LED display. Now press the “**ENTER**” button.

The unit will now display the fixtures temperature.

To exit out of any of the above options, press the “**MENU**” button.

Fixture hours:

To display the fixtures hours, press the “**MENU**” button and use the “**UP**” and “**DOWN**” buttons to show **F h r S** on the LED display. Now press the “**ENTER**” button.

The unit will now display the fixtures hours.

To exit out of any of the above options, press the “**MENU**” button.

Software version:

To display the fixtures software version, press the “**MENU**” button and use the “**UP**” and “**DOWN**” buttons to show **v E r** on the LED display. Now press the “**ENTER**” button.

The unit will now display the software version.

To exit out of any of the above options, press the “**MENU**” button.

Factory reset:

To reset the fixture to factory settings, press the “**MENU**” button and use the “**UP**” and “**DOWN**” buttons to show **r S t** on the LED display. Now press the “**ENTER**” button and use the “**UP**” and “**DOWN**” buttons to choose between **n o** or **y e s**. Press the “**ENTER**” button.

The unit will now perform a factory reset.

Setting the DMX address:

The DMX mode enables the use of a universal DMX controller. Each fixture requires a “start address” from 1- 512. A fixture requiring one or more channels for control begins to read the data on the channel indicated by the start address. For example, a fixture that occupies or uses 7 channels of DMX and was addressed to start on DMX channel 100, would read data from channels: 100, 101, 102, 103, 104, 105 and 106. Choose a start address so that the channels used do not overlap. E.g. the next unit in the chain starts at 107.

DMX 512:


DMX (Digital Multiplex) is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a data “out” terminal).

DMX linking:

DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned to a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

DATA cable (DMX cable) requirements (for DMX operation):

This fixture can be controlled via DMX-512 protocol. The DMX address is set on the back of the unit. Your unit requires either a standard 3-pin or 5-pin XLR connector for data input/output, see images below.

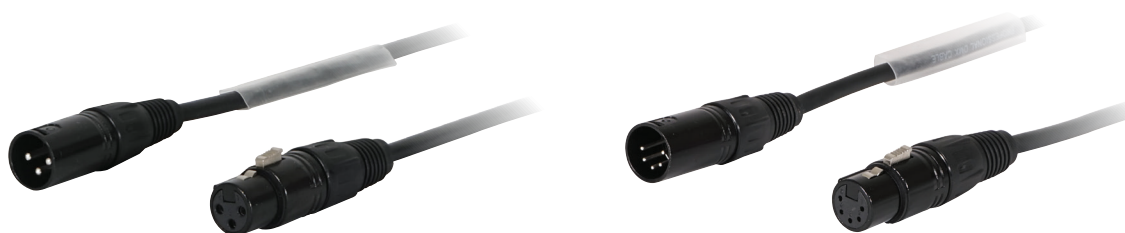

Further DMX cables can be purchased from all good sound and lighting suppliers or Prolight Concepts dealers.



Please quote:	3-Pin:	CABL10 – 2m	CABL11 – 5m	CABL12 – 10m
	5-Pin:	CABL185 – 2m	CABL187 – 5m	CABL188 – 10m

Also remember that DMX cable must be daisy chained and cannot be split.

Notice:

Be sure to follow the diagrams below when making your own cables. Do not connect the cables shield conductor to the ground lug or allow the shield conductor to come in contact with the XLRs outer casing. Grounding the shield could cause a short circuit and erratic behaviour.

Pin Configuration	
3-Pin	5-Pin
	Pin 1 - Ground
	Pin 2 - Negative
	Pin 3 - Positive
-	Pin 4 - N/C
-	Pin 5 - N/C

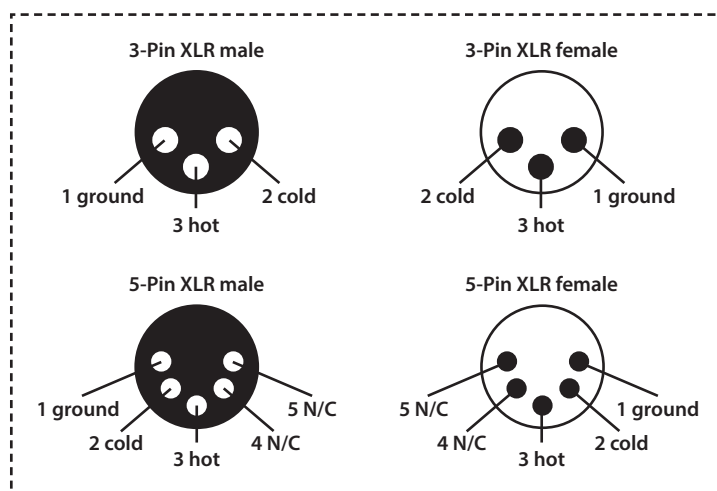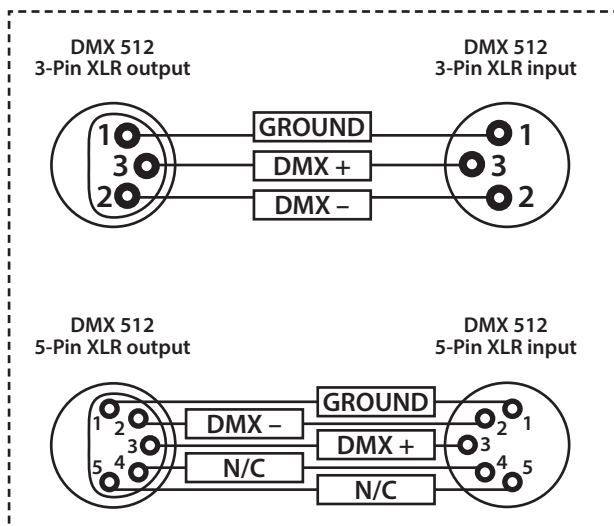


Line termination:

When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.

Using a cable terminator will decrease the possibilities of erratic behaviour.


(3-pin - Order ref: CABL90,

5-pin - Order ref: CABL89)

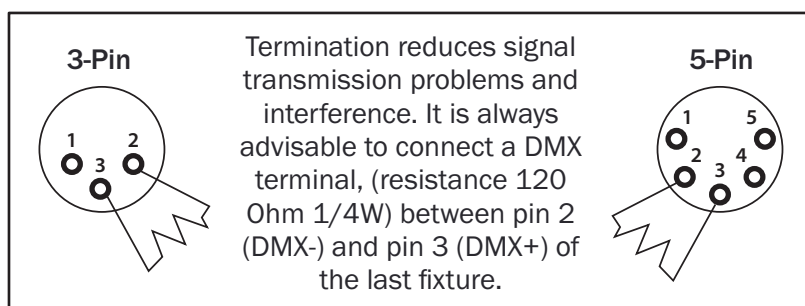

5-pin XLR DMX connectors:


Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The diagram below details the correct cable conversion.

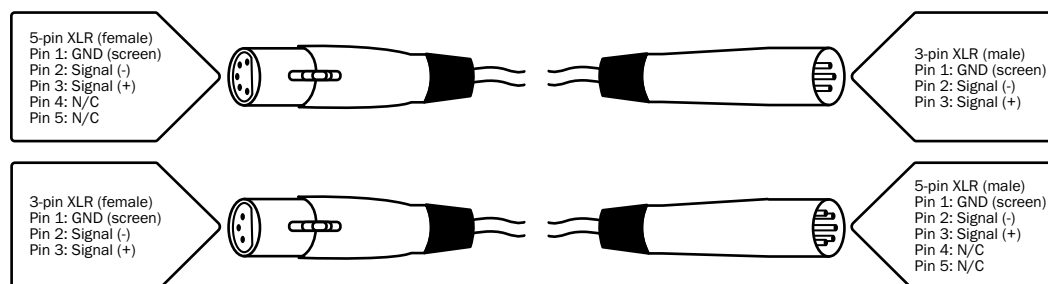

Power linking:

This fixture provides power linking via the power output on the rear allowing multiple units to be connected together. The maximum number of fixtures that can be connected is 16 fixtures @ 240V or 8 fixtures @ 120V (including the first fixture). After the maximum number of fixtures are connected a new power run will need to be started.

Please note: Caution should be used when power linking other fixtures to the Waterwave XP as the power consumption of other fixtures will vary. Fixtures fitted with lamps often require 2/3 times more current on startup, these may require their own power source.

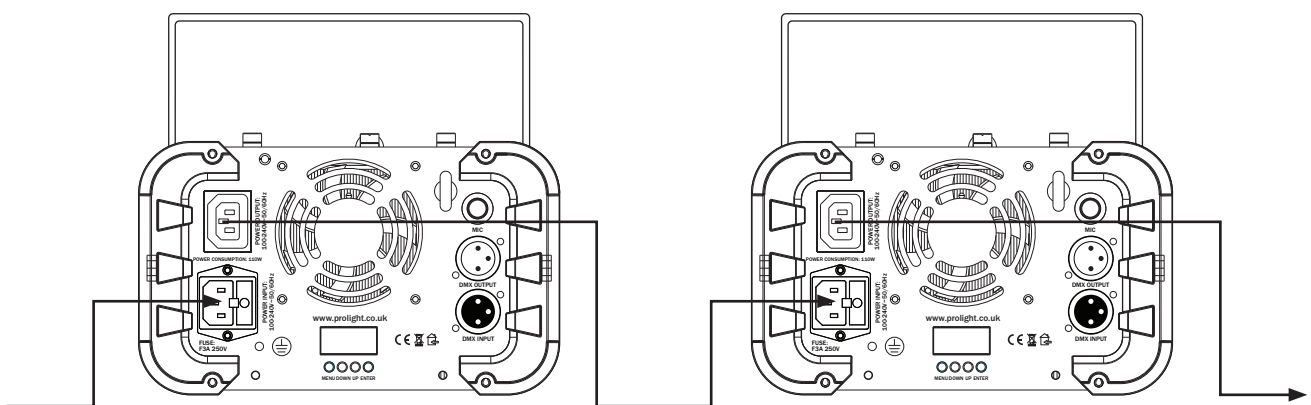



***Correct Disposal of this Product
(Waste Electrical & Electronic Equipment)***

**(Applicable in the European Union and other European countries
with separate collection systems)**

This marking shown on the product or its literature, indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

