

EQUIN  X

RIPPER

Order code: EQLA27



User manual

WARNING

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**

**CAUTION!**

**Keep this equipment away from rain,
moisture and liquids.**

**SAFETY INSTRUCTIONS**

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual



**CAUTION! TAKE CARE USING THIS EQUIPMENT!
HIGH VOLTAGE-RISK OF ELECTRIC SHOCK!!**



Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 220v/240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. **THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.**
- **WARRANTY;** One year from date of purchase.

OPERATING DETERMINATIONS

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.

Do not endanger your own safety and the safety of others!
Incorrect installation or use can cause serious damage to people and property.


You should find inside the Laser carton the following items:

- 1, Ripper Laser 2, Power cable 3, User manual 4, SD Card

Technical Specifications:

- DMX Channels: 13
- Sound active, auto, DMX and master/slave modes
- Output power: 1 x 50mW Green 532nm, 1 x 150mW Red 650nm
- Connection: 3-pin XLR for DMX
- SD card reader
- Power consumption: 27W
- Power supply: 240V
- Dimensions: 218 x 314 x 175mm
- Weight: 2.8Kgs
- Fuse: 2A

Back view:

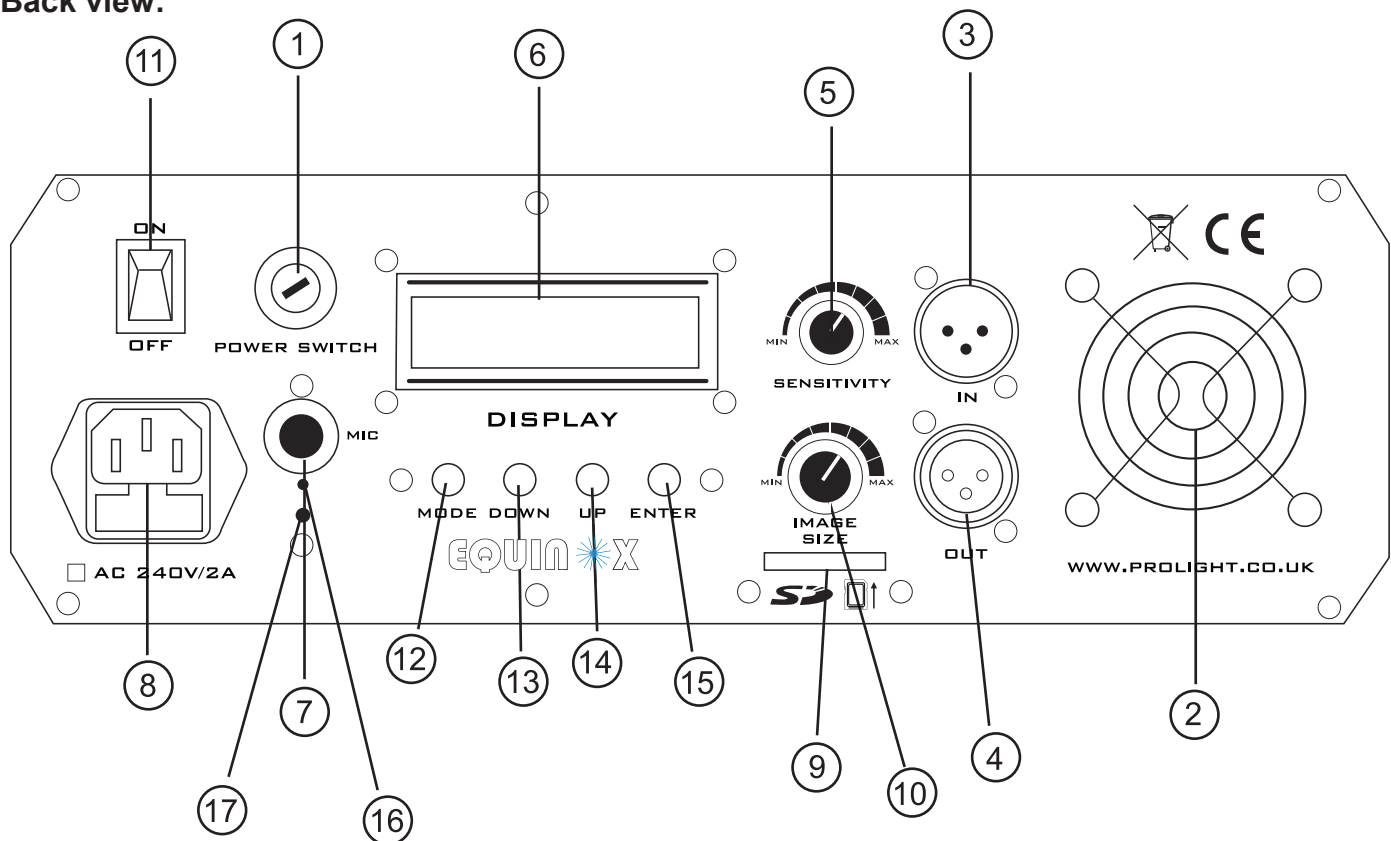

Identification:

- | | | |
|------------------------------|------------------------|---------------|
| 1, Key lock | 9, SD card slot | 16, Power LED |
| 2, Cooling fan | 10, Image size control | 17, Sound LED |
| 3, DMX In | 11, On/Off switch | |
| 4, DMX out | 12, Mode button | |
| 5, Audio sensitivity control | 13, Down button | |
| 6, LCD display | 14, Up button | |
| 7, Microphone | 15, Enter button | |
| 8, Power input | | |

Operation modes:

Sound active mode

To activate this mode, press the “**MODE**” button to show “**AUDIO MODE**” on the LCD display screen. Now press the “**ENTER**” button. The unit will now run through the sound active mode patterns to the beat of the music. In this mode the Ripper will only display the “**AURORA**” patterns.

To set the sound sensitivity level for this mode, use the sensitivity control on the rear of the unit.

Auto mode

To activate this mode, press the “**MODE**” button to show “**AUTO MODE**” on the LCD display screen. Now press the “**ENTER**” button. The unit will now run through the built-in auto mode patterns. In this mode the Ripper will only display the “**AURORA**” patterns.

DMX mode

To activate this mode, press the “**MODE**” button to show “**DMX MODE**” on the LCD display screen. Now press the “**ENTER**” button and use the “**UP**” and “**DOWN**” buttons to set the DMX address form 001-512.

Slave mode

To activate this mode, press the “**MODE**” button to show “**SLAVE MODE**” on the LCD display screen. Now press the “**ENTER**” button. The unit will now run in sequence with the master unit.

SD card mode

To activate this mode, press the “**MODE**” button to show “**PROGRAM TABLE**” on the LCD display screen. Now press the “**ENTER**” button. The unit will now show the selected animation folder from the SD card.

To select an animation folder, press the “**MODE**” button to show “**FOLDER SELECT**” on the LCD display screen. Now press the “**ENTER**” button and use the “**UP**” and “**DOWN**” buttons to select one of three demonstration folders pre-programmed onto the SD card;

1) ANIMA, 2) C, 3) BEAM

When the chosen folder has been selected, press the “**ENTER**” button and the unit will now revert back to the SD card mode showing the chosen animation programme.

Caution: This system only supports the FAT32 file system, when using a new SD card please format it as a FAT32 format file before use.

This system only supports short file names and folder names of up to 8 digit names and 3 digit extensions, the file names and extension formatted by the letters, numbers and underscores and so on.

Do not leave or include any other files on the SD card, it can support up to 100 folders, each can store up 255 files.

Important: This laser will only work in the Sound and Auto mode without the SD card in the laser

Key seek function

In this mode you can select any of the individual animations from the selected folder.

To do this, press the “**MODE**” button to show “**KEY SEEK**” on the LCD display screen. Now press the “**ENTER**” button and use the “**UP**” and “**DOWN**” buttons to browse through the animations or beam list folders. Please make sure that you have the correct folder selected first from the “**FOLDER SELECT**” option.

Once the animation or beam pattern has been selected, that pattern will be repeated over and over again until the animation or mode has been changed.

System set function

In this function, you can set the colour output, change the X & Y axis and the audio setting.

To access this function, press the “**MODE**” button to show “**SYSTEM SET**” on the LCD display screen. Now press the “**ENTER**” button and use the “**UP**” and “**DOWN**” buttons to select one of the following;

- 1) Colour setting mode
- 2) Audio setting
- 3) Phasic setting (orientation)

When the chosen setting has been selected, use the “**UP**” and “**DOWN**” buttons to browse the setting options;

Colour setting options: (auto and sound active modes only)

- 1) RGY
- 2) Yellow
- 3) RG

Audio setting options:

Controls the amount of movements from low to high

Phasic setting (orientation):

- X +, Y + = Right facing
- X -, Y + = Left facing
- X -, Y - = Flip upside down, Right facing
- X +, Y - = Flip upside down, Left facing

DMX chart

Channel	DMX Address	Function
CH.1	0-73	No function
	74-110	SD Card auto mode
	110-147	Individual animation mode <small>(use CH2 for folder selection, use CH3 for animations)</small>
	148-184	Sound Active
	185-221	Auto pattern mode
	222-255	Manual pattern mode <small>(use CH2 for patterns, use CH3 for strobe)</small>
CH.2	0-255	Pattern selector
CH.3	0-255	Strobe speed (slow-fast)
CH.4	0-125	Manual adjust the horizontal positioning
	126-155	Auto horizontal movement (right-left)
	156-185	Auto horizontal movement (left-right)
	186-225	Auto horizontal movement (right-left)
	226-245	Auto horizontal jump movement
	246-255	Sound active horizontal jump movement
CH.5	0-125	Manual adjust the vertical positioning
	126-155	Auto vertical movement (up-down)
	156-185	Auto vertical movement (down-up)
	186-225	Auto vertical movement (up-down)
	226-245	Auto vertical jump movement
	246-255	Sound active vertical jump movement
CH.6	0-10	No function
	11-100	Pattern size adjustment (small-big)
	101-150	Auto zoom in
	151-200	Auto zoom out
	201-255	Auto zoom in/out
CH.7	0-10	No function
	11-110	Manual horizontal rotation
	111-255	Auto horizontal rotation
CH.8	0-10	No function
	11-110	Manual vertical rotation
	111-255	Auto vertical rotation
CH.9	0-180	Manual anti-clockwise
	181-217	Auto anti-clockwise rotation
	218-255	Auto clockwise rotation
CH.10	0-70	Manual drawing adjustment
	71-104	Auto draw clockwise
	104-144	Auto draw anti-clockwise
	145-184	Auto draw in/out
	185-224	Auto draw out
	225-255	Auto draw in
CH.11	0-10	No function
	11-199	Auto wave (slow-fast)
	200-255	Auto wave amplitude (small-big)
CH.12	0-18	Yellow
	19-37	Red
	38-56	Green
	57-75	No function
	76-94	Yellow
	95-113	Red
	114-132	Green
	133-151	Red, Green and Yellow 1
	152-170	Red, Green and Yellow 2
	171-189	Red, Green and Yellow 3
	190-208	Red, Green and Yellow flow 1
	209-227	Red, Green and Yellow flow 2
	228-246	Red, Green and Yellow flow 3
247-255	Yellow and Red	
CH.13	0-129	Full line
	130-192	Dash line
	193-255	Dotted line

Class 3B Laser Lighting Effect User Safety Guide ProLight Concepts Limited

Important Warnings

Class 3B Lasers have the potential to harm eyesight if viewed directly in the face, and in many instances this may be the case, even if viewed over longer distances of several tens of metres. Therefore before using the laser product you should familiarise yourself with its operation, and also the safety aspects that need to be considered.

Laser lighting effects are quite safe to watch if installed and used correctly, and being aware of a few basic factors will help you to achieve this. This guide has been prepared to help provide a basic backgrounder to the key safety aspects, and is based on current UK health and safety guidance on the use of lasers for public displays.

Installation and Operation Notes

1. The laser should only be installed and operated by those that are aware of how to operate laser, and what the various controls perform. The keyswitch provided on the laser should help to prevent use by unintended people.
2. The laser should be mounted in a suitable and secure position in the venue, so that once in position it is unlikely to be affected by unintended movement.
3. Prior to installation and operation of the laser, the paths of the beams and effects should be considered, particularly with respect to how they will touch the audience. If direct audience scanning is desired then the laser energy in the effects needs to be considered to decide if the effects are safe for direct viewing.

Introduction

Laser lighting products are used to create some of the most vivid and striking visual effects, and are often noted for how they seem to produce solid shapes that cut through the air, and pick up highly defined swirling smoke patterns. The light that is used to create these stunning effects is different from normal light and therefore several precautions need to be taken when using lasers to ensure that the lighting effects are safe and enjoyable to view. The optical power output from the kind of lasers used for lighting displays can be harmful if not properly setup or is misused. But when used following the recommended health and safety guidelines, laser lighting effects no more harmful than looking at any conventional lighting effect.

This guide has been put together to provide you with some background information about laser safety, and guidance on the recommended health and safety requirements for using lasers in public places. Although this guide covers the main points to consider when using laser effects, users are advised to familiarise themselves with other guidance, particularly that issued by the Health and Safety Executive, HS(G)95 The Radiation Safety Of Lasers Used For Display Purposes, which is freely downloadable from the HSE website. Attending one of the laser safety training courses, listed at the end of this guide, is also highly recommended.

What is a laser?

A laser is a device that produces a special kind of light that is different from normal light sources. Laser light sources differ from normal light sources in that they can produce very intense beams of light that can remain parallel over long distances. It is this high concentration of light that can sometimes make lasers harmful to look directly into.

What is a Class 3B Laser?

Any device that contains a laser has to be classified depending upon the amount of laser light that someone might be exposed to. During design and manufacture of the product, the manufacturer assigns the laser product to one of the various classes defined in the Laser Product Safety Standard (BS/EN 60825-1:2007). The classes range from the safest, which is Class 1, through to the most hazardous, which is Class 4.

For example, CD and DVD players contain lasers to read the disk, and because they are normally inaccessible to people, they are classified as a Class 1 laser product. Laser Pointers output more accessible power than CD/DVD players and are normally limited to being Class 2 devices. While most laser lighting effects products are Class 3B and Class 4 laser products. These two classes have the highest potential to cause harm because they emit the greatest light output. This is, of course, desirable and necessary for laser lighting effects!

A laser product that emits more than 5mW of light and less than 500mW is normally classified as a Class 3B laser product, meaning it carries a risk of harming eyesight if viewed directly.

Are Class 3B Laser Lighting Effects safe to view?

Yes, if used responsibly, and in accordance with the relevant guidance issued by the Health and Safety Executive.

In the simplest terms, generally keeping the beams and effects above the audience will not present a hazard to those viewing the show or effects. When you start to aim the laser effects down into the audience area is when it becomes harder to tell if the effects could cause harm. With a Class 3B laser lighting effect, the problem can arise if the beams or effects actually hit someone's face.

If in doubt, keep the effects above the audience.

What harm can a Class 3B Laser cause?

Class 3B laser devices can be harmful to eyesight if viewed directly. i.e. that is, the beam or effect strikes the face of a person. The actual injury that a Class 3B laser can cause depends upon a number of factors, including how long the laser beam enters the eye for, the intensity of light, and what part of the eye it actually gets focused onto. The most susceptible part of the eye to receive damage from a laser is the internal back wall of the eyeball, known as the retina. It is this part of the eye that receives the light signals that are sent to brain. All light entering the eye gets focused onto the retina.

Normal light sources such as traditional light bulbs and regular lighting effects are normally not harmful to view. Lasers differ in that they can get focused down to very small points on the retina that can literally burn holes on the back of the eye, which can lead damage to eyesight. This process can happen in less time than it takes for a person to blink. There are no pain receptors on the retina, so the person will be unaware of any damage taking place. Damage caused to the retina is permanent, and can vary from unnoticeable loss of vision, through to severe loss of sight, particularly if the damage occurs in the part of the retina that senses the central vision.

Are there any laws or licences relating to using Class 3B lasers?

There are no specific "laser licences" that anybody needs in order to own or operate a laser for lightshow use. However, there is specific guidance issued by the Health and Safety Executive in the form of a document called HS(G)95 The Radiation Safety of Lasers Used for Display Purposes. HS(G)95 outlines a number of detailed points to consider when using lasers for lightshow purposes.

Furthermore, since April 2010 new health and safety legislation was introduced in the UK that sets legal limits as to the amount of laser light a person may be exposed to in the workplace. Class 3B lasers have the ability to exceed the safety limits. The full title of the laser safety regulations is the Control of Artificial Optical Radiation at Work Regulations 2010, which also define the need for risk assessment of the exposure levels.

Most places of public entertainment operate under a Public Entertainments Licence, which is issued by the Local Authority. The entertainment licence requirements will normally need to have a specific provision covering the use of lasers at the venue, where it is expected that the laser installation, (whether temporary or permanent), is to operated in compliance with the HS(G)95 laser safety guidance as part of the venue's Public Entertainment Licence conditions.

The use of lasers, as any other equipment used for shows, will also be covered by more general health and safety legislation, such as the Health & Safety at Work Act 1974, and the Management of Health and Safety at Work Regulations 1999, etc. These regulations, among other things, state that you must ensure the safety of people present at the event where the laser is used, and also that a suitable risk assessment regarding the use of laser must be carried out.

Class 3B Laser Product Features

Class 3B laser products are required to have several specific safety features as part of their design. These features are laid out in the British Standard on Laser Product Safety BS/EN 60825-1:2007 and are a requirement of the product meeting CE approvals.

The important ones are listed below:-

- 1) Laser Safety Warning Labels
- 2) Key switch
- 3) Emissions Indicator
- 4) Remote Interlock Connector

Summary of each features purpose

The Class 3B laser projector should contain three Laser Safety Warning Labels; the starburst symbol, aperture label, and the warning/classification label. The starburst is intended to show that the product is a laser product, using the starburst symbol in the warning triangle. The aperture label is located to indicate where the laser projector emits its beams. The warning/classification label states the class of the laser product, the maximum output power, and the wavelength(s) (colours) of the laser, along with a warning " Laser Radiation – Avoid Exposure To The Beam"

The Keyswitch is provided to help limit the use of the laser projector to those that have key access. Without the key inserted and in the on position, the laser will not emit an output. The idea behind laser products having key switches is that only those people that are aware of how to operate the laser safely should be given access to the keys.

The emissions indicator is intended to show when the laser is ready to produce a light output.

The Remote Interlock Connector will only allow the laser to function when the two pins are shorted together. For lightshow use it is recommended by HS(G)95 laser safety guidance laser effects can be overridden by a remote Emergency Stop switch. The remote interlock connector provides a convenient way for such a switch to be easily added to the laser system, to provide this control.

Audience Scanning

Audience Scanning is the term commonly used to describe when laser effects are being directly aimed at the viewing audience. This creates a very dramatic looking effect, as people can touch the light, and look down smoky tunnels. But because the laser light can touch or scan past people's faces, it also carries a risk that it could cause damage to people's eyesight, if they are overexposed to the laser light.

Maximum Permissible Exposure (MPE)

The amount of laser light that a person can be exposed to without it causing harm to eyesight is known as the Maximum Permissible Exposure (MPE) or Exposure Limit Value (ELV). These levels are defined in the British Laser Safety Standard BS/EN 60826-1:2007, and more recently in the Laser H&S regulations. When people are exposed to laser light which is above the MPE, it poses a risk of causing eye damage. This could be of concern when the laser effects are viewed directly in the face or there is a chance that they could be.

How do I know what the MPE is?

Knowing what the MPE and exposure level is for a given laser effect is quite a complex and involved process to establish. For it is dependant on a whole number of conditions and variables that need to be taken into account. The laser safety standard BS/EN 60825-1:2007 contains the data required to calculate the safe levels, but it is not straightforward to interpret. Laser Safety \Calculation Software has been developed to help ease the task of establishing laser effects exposure.

Laser Safety Officer


The PD IEC/TR 60825-14:2004 Laser Safety Guidance recommends that all establishments that use, or businesses that work with Class 3B laser products, should appoint a Laser Safety Officer (LSO). The Laser Safety Officer should be aware of the safety issues when using lasers, and is responsible for overseeing how the laser is used. In smaller businesses, the LSO will probably also be the installer, operator, owner etc.

Diffraction vs Direct X-Y Scanning Lasers

Diffraction type lasers have become increasingly popular in recent years creating laser effects that split the beam into hundreds, if not thousands of less powerful beamlets. This type of effect is usually much safer to view directly than traditional scanned beam effects, for the simple reason that as the beam is split into smaller beams, the power in each beam is reduced. With x-y scanning systems, even though it may look as if the power is being reduced by the movement, the moment any beam crosses a person's face, the full power of the beam may briefly enter someone's eye. Caution should still be used with diffraction effects, in particular ensuring that the brighter central beams are kept above head height.

Separation Distances

Health and Safety guidance states that for supervised installations laser light above the Maximum Permissible Exposure (MPE) should not be accessible to members of the audience. It also recommends the area where the MPE may not be exceeded, extends from 3m above, and 2.5m laterally from any location in the venue where members of the public may gain access during the display. The following diagrams illustrate this.

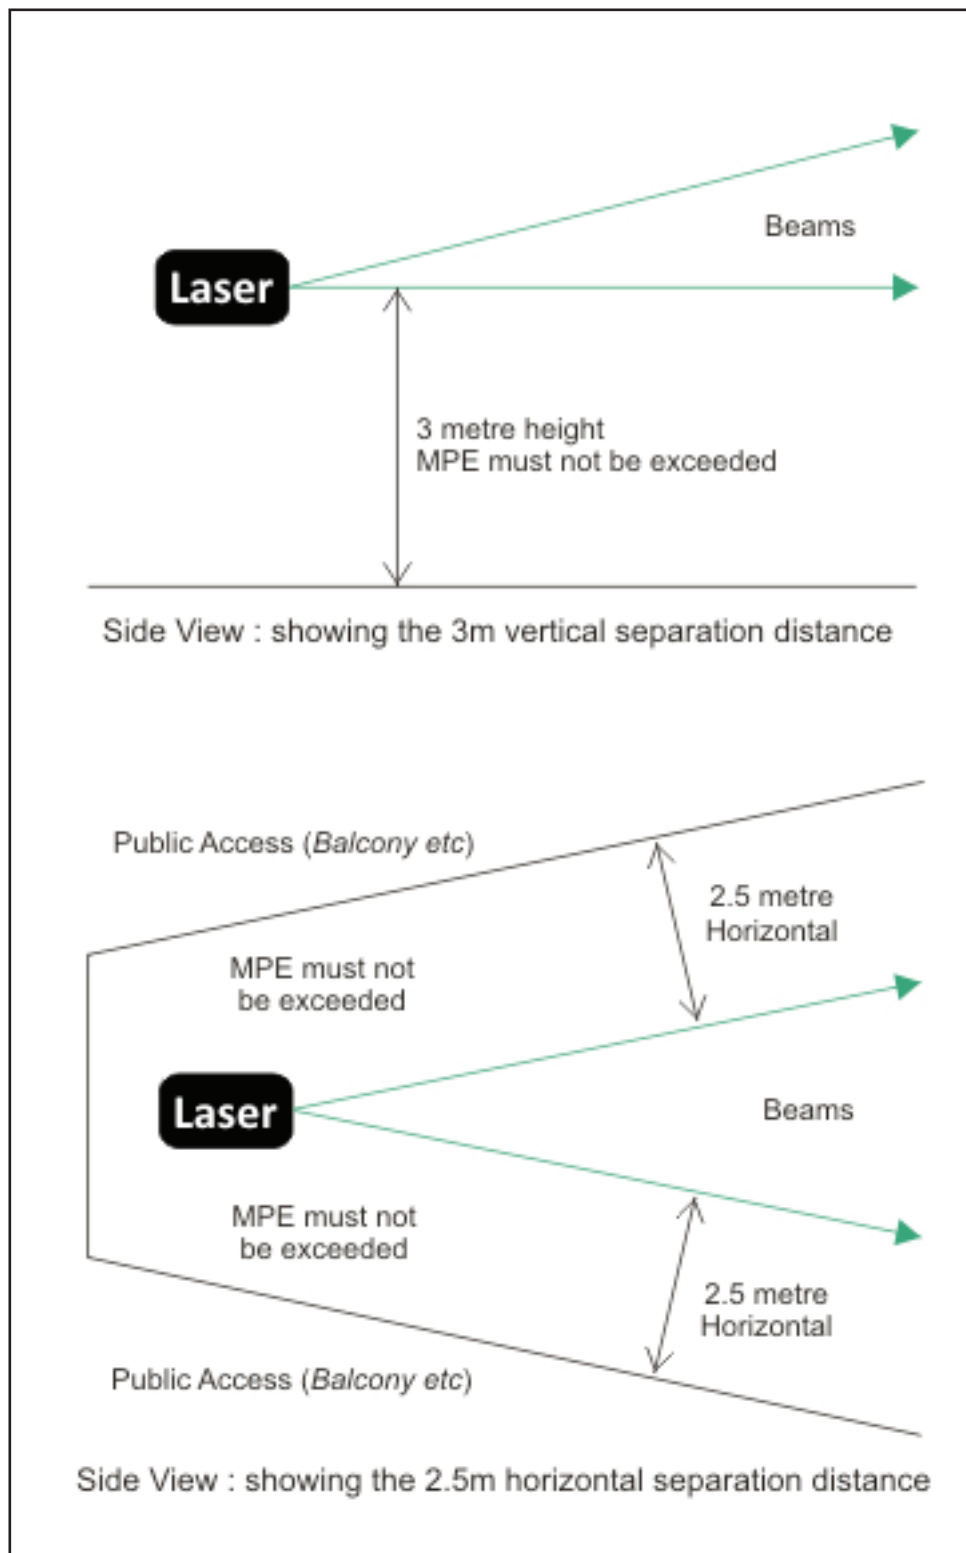Diagrams showing Separation Distances

Note. The 3 metre height specified is not the height of the actual projector, but it refers to the height of the laser effect. Therefore having the laser projector positioned at 3m height and aimed directly down is not what the guidance is saying.

What types of effect are safe to scan directly at audiences?

Fast moving laser effects with evenly distributed scan patterns, such as circular tunnels are generally safer than effects such as finger beams, or effects with pronounced bright spots in them. Diffraction grating type effects are typically safer to point towards an audience, as long as the bright central spots are kept above head height. The important thing is to not guess if an effect is safe or not, and if in doubt keep it above head height. Being aware of the laser's hazard distance is useful to know.

Hazard Distances

All display lasers have a characteristic known as the hazard distance for direct viewing (NOHD). This is distance at which the hazard of viewing the laser directly no longer presents a hazard. i.e. at any point between the laser projector and the calculated hazard distance, it may be hazardous to view the laser directly. But viewing the laser directly from beyond the hazard distance is considered to be safe.

The worst case effect to look at directly is a static single beam, because all the light energy is concentrated into one point. The hazard distances for several different powers of typical Class 3B laser are shown in the table below, to give an idea of the distances involved.

Laser Output Power	10mW	30mW	50mW	100mW	250mW	450mW
Hazard Distance	12m	20m	25m	36m	56m	76m

Table 1 Static Beam Hazard Distances.

Note - The values have been calculated assuming the characteristics of a typical laser lightshow device, which has a beam spread of 2mradians. Actual devices may differ in practice, so this table should only be used as a guide. Details of how to calculate laser hazard distances are detailed in the British Safety Standard, and many laser safety text books. It is also one of the topics usually covered in laser safety courses.

It can be seen that static laser beams can remain hazardous for considerable distances, which is why projecting such effects into peoples faces is not recommended.

Remember, projecting these beams overhead is fine, as long as they, or any reflections, are not hitting anybody.

When an effect such as a tunnel is projected, the continual scanning reduces the time the eye is directly exposed to the laser energy. These types of effect are less harmful to aim at the audience directly. The table below shows the hazard distances of a stationary circular tunnel, with a spread of 50 degrees, and a scan rate of 20Hz, to give an idea of how it is reduced.

Laser Output Power	10mW	30mW	50mW	100mW	250mW	450mW
Hazard Distance	5m	9m	11m	16m	26m	35m

Table 2 Scanned Tunnel Hazard Distances.

Further Laser Safety Information and References

The Radiation Safety of Lasers used for Display Purposes HS(G)95
HSE's guidance on the safe use of lasers for light shows – Free download
<http://www.hse.gov.uk/pubns/books/hsg95.htm>

Control of Artificial Optical Radiation at Work Regulations 2010
New UK law specific to the use of lasers – Free download
http://www.opsi.gov.uk/si/si2010/pdf/uksi_20101140_en.pdf

A Non-Binding Guide to the Artificial Optical Radiation Directive
Pages 114-116 contain specific guidance on laser shows – Free download
<http://www.hse.gov.uk/radiation/nonionising/aor-guide.pdf>

BS/EN 60825-1:2007 Safety of Laser Products - Part 1
British Laser Product Safety Standard: Equipment Classification and Requirements
www.bsigroup.co.uk

PD IEC/TR 60825-3:2008 Guidance for Laser Displays and Shows
Issued by British Standards Institute
Website - www.bsigroup.co.uk

PD IEC/TR 60825-14:2004 Laser Safety User Guide
User Guide Issued by British Standards Institute
Website – www.bsigroup.co.uk

Health & Safety Executive
Website - www.hse.gov.uk

Laser Information and Safety Advice - Health Protection Agency
Website - www.hpa.org.uk

Laser Show Safety Information Website
Website - www.lasershowsafety.org

Laser Safety Calculation Software
Scanguard - LVR Limited
Website – www.lvrlimited.com

Laser Safety Training

LVR Limited – Laser Show Safety Training.
Website - www.lvrlimited.com

Health Protection Agency – General Laser Safety Training Courses
Website - www.hpa.org.uk

Copyright Notice – This document has been prepared for ProLight Concepts Limited by LVR Limited, who retains the copyright of this Laser Safety Guide. No part of this guide can be reproduced without the express written consent of LVR Limited.