



[www.prolight.co.uk](http://www.prolight.co.uk)



# **ALU ZOOM PAR 64**

Order code: LEDJ114

## **USER MANUAL**

**WARNING**

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY  
BEFORE YOUR INITIAL START-UP!**

**CAUTION!**

**Keep this equipment away from rain,  
moisture and liquids.**

**SAFETY INSTRUCTIONS**

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual



**CAUTION! TAKE CARE USING THIS EQUIPMENT!  
HIGH VOLTAGE-RISK OF ELECTRIC SHOCK!!**



Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

**IMPORTANT:**

**The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.**

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 220v/240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY; One year from date of purchase.

**OPERATING DETERMINATIONS**

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.

Do not endanger your own safety and the safety of others!

Incorrect installation or use can cause serious damage to people and property.

You should find inside the LEDJ carton the following items:

1, Alu Zoom Par 64 Unit                      2, Instruction manual


### Technical Specifications:

DMX Channels: 6  
 Voltage: AC 240 ~ 50Hz  
 24 Ultra bright 3W LEDs (R: 8 , G: 8 , B: 8 )  
 Power Consumption: 75W  
 Beam Angle: 10° - 60° (adjustable)  
 Connection: 3-Pin XLR  
 Built-in microphone  
 LED display  
 Dimensions: 300 x 270 x 220mm  
 Weight: 6.5Kgs

Operating modes: 1, Static colour mode  
 2, 3 Colour change mode  
 3, 7 Colour change mode  
 4, 3 Colour fade mode  
 5, 7 Colour fade mode  
 6, Auto run mode  
 7, Sound active mode  
 8, Slave mode  
 9, DMX mode

### DMX Channel Summary

CHANNEL	VALUE	FUNCTION
1	000-255	RED
2	000-255	GREEN
3	000-255	BLUE
4	000-255	DIMMER
5	0-10	NO FUNCTION
	11-255	STROBE (0.5HZ=slow, 30HZ= fast)
6	0-255	ZOOM ADJUSTMENT

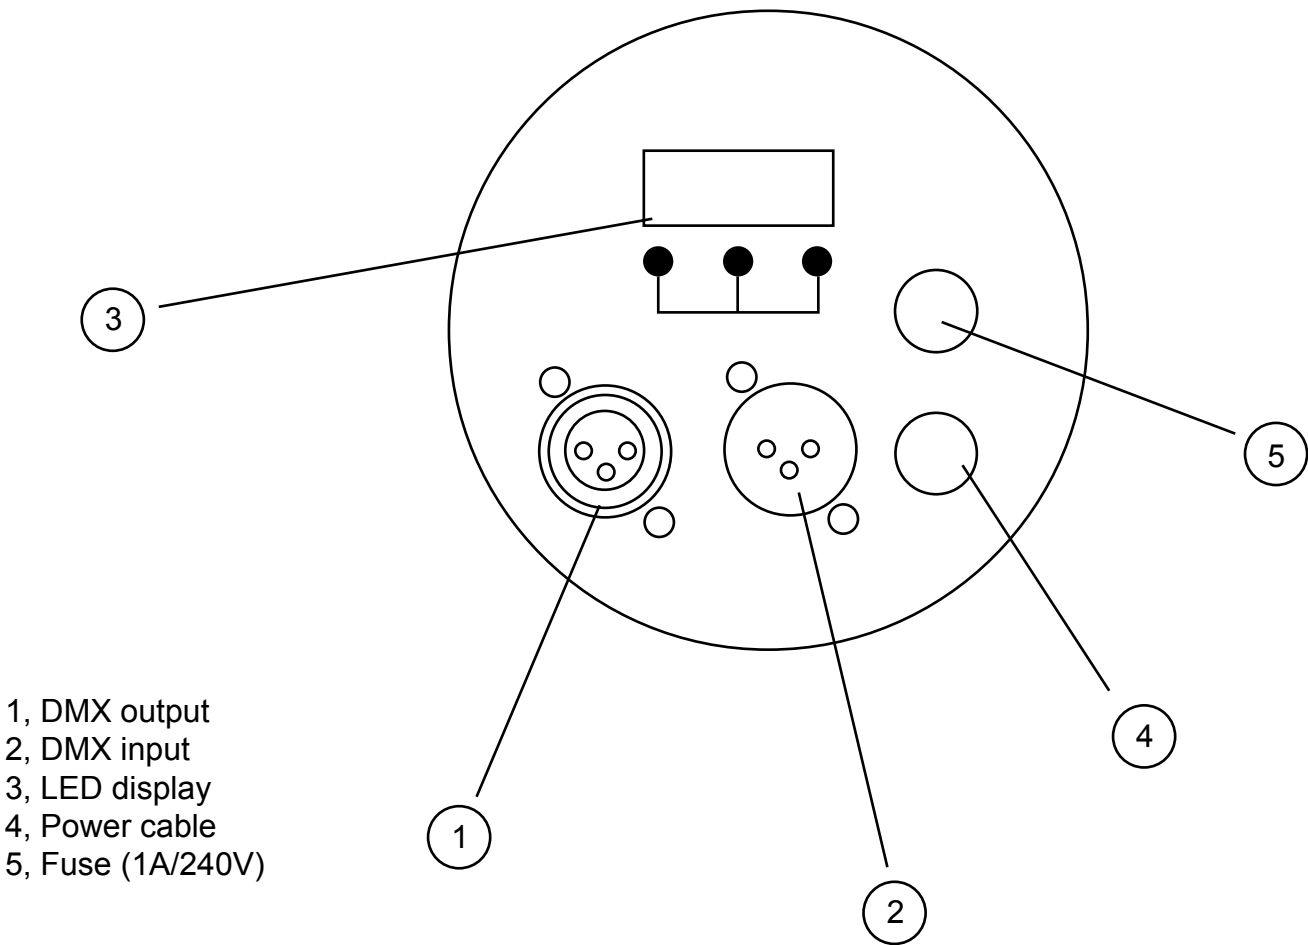**Overview:****Setup****Operating Instructions**

The Alu Zoom Par 64 is a DMX-512 controllable, full RGB colour mixing Par Can made up of high efficiency and super bright 3W LED's. There are three colour groups (red, blue and green) whose intensity can be controlled individually allowing the creation of an unlimited range of colours.

The Alu Zoom Par 64 will operate in Stand-alone, Master/Slave, Sound activated and DMX-512 control modes.

**Operations:**

There are 9 different operation modes to choose from:

- |                         |                       |                      |
|-------------------------|-----------------------|----------------------|
| 1) Static colour mode   | 4) 3 Colour Fade mode | 7) Sound Active mode |
| 2) 3 Colour change mode | 5) 7 Colour Fade mode | 8) Slave mode        |
| 3) 7 Colour change mode | 6) Auto Run mode      | 9) DMX mode          |

## 1. Static colour mode

**Mode button** - By pressing the “**MODE**” button under the LED display, the LED display will show “**CL0**”, then you can select one of the 7 static colours using the “**UP**” and “**DOWN**” buttons. The Colours range from 1 - 7 and are listed below:

1, Red      2, Green      3, Blue      4, Purple      5, Yellow      6, Cyan      7, White

## 2. 3 Colour change mode

**Mode button** - Press the **MODE** button until the LED display shows “**J00**”, then the unit will run in 3 Colour change mode. Select the speed from 01 - 99 via the “**UP**” and “**Down**” buttons. (01 = Slow, 99 = Fast)

## 3. 7 Colour change mode

**Mode button** - Press the **MODE** button until the LED display shows “**J.00**”, then the unit will run in 7 Colour change mode. Select the speed from 01 - 99 via the “**UP**” and “**Down**” buttons. (01 = Slow, 99 = Fast)

## 4. 3 Colour fade mode

**Mode button** - Press the **MODE** button until the LED display shows “**F00**”, the unit will then run in 3 Colour Fade mode. Select the fade speed from 01 - 99 via the “**UP**” and “**Down**” buttons. (01 = Slow, 99 = Fast)

## 5. 7 Colour fade mode

**Mode button** - Press the **MODE** button until the LED display shows “**F.00**”, the unit will then run in 7 Colour Fade mode. Select the fade speed from 01 - 99 via the “**UP**” and “**Down**” buttons. (01 = Slow, 99 = Fast)

## 6. Auto Run mode

**Mode button** - Press the **MODE** button until the LED display shows “**A--**”, the unit will then run in Auto Run mode. The Par Can alternates automatically between colour fade and colour change modes using the speed that you have previously set by following the instructions above.

## 7). Sound active

**Mode button** - Press the **MODE** button until the LED display shows “**S00**”, the unit will then run in Sound Active mode. Select the sensitivity level from 01 - 30 via the “**UP**” and “**Down**” buttons.

**Please note: The higher the value the more sensitive it will be.**

## 9). Slave mode

Link the units together using a 3-pin DMX cable, then press the **MODE** button to select one of the above modes. On the Slave units press the mode button until the LED display shows “**SLA**”. The Slave units will then follow in sequence with the Master unit.

### **9). DMX mode**

To access the 6 channel DMX mode, press the **MODE** button until the LED display shows “**001 - 512**” (DMX address), this unit occupies 6 DMX channels. The DMX values and functions are as follows.

CHANNEL	VALUE	FUNCTION
1	000-255	RED
2	000-255	GREEN
3	000-255	BLUE
4	000-255	DIMMER
5	0-10	NO FUNCTION
	11-255	STROBE (0.5HZ=slow, 30HZ= fast)
6	0-255	ZOOM ADJUSTMENT

### **10). Led display ON/OFF**

This unit has two LED display options:

- 1, Once the unit is turned on, press the “**MODE**” button plus the “**UP**” button, and the LED display will always stay on.
- 2, Once the unit is turned on press the “**MODE**” button plus the “**DOWN**” button, and if no operations are selected within 20 seconds, the LED display will turn off automatically.

### **11) Zoom adjustment mode**

To operate the zoom adjustment mode, press and hold the “**MODE**” button until the LED display shows “**OTr**”, after a short duration the LED display will change to show “**XXX**”, now you can enter a value from 0 - 42 (0 = Wide and 42 = Narrow). Also in this mode, you can adjust the running position of the Zoom adjustment by using the “**UP**” and “**DOWN**” buttons. To exit this mode, press and hold the “**MODE**” button again and the LED display will show the running status.

#### **DMX-512:**

- DMX (Digital Multiplex) is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a data “out” terminal).

#### **DMX Linking:**

- DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned to a DMX address of 1 may be placed anywhere in the DMX line. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

**DATA Cable (DMX cable) requirements (for DMX operation):**

- The Alu Zoom Par 64 can be controlled via DMX-512 protocol. The DMX address can be set on the back of the fixture. Your fixture and your DMX controller require a standard 3-pin XLR connector for data input/output (figure 1).

**Figure 1**



Further DMX cables can be purchased from all good sound and lighting suppliers or Prolight dealers.  
Please quote:  
CABL10 – 2M  
CABL11 – 5M  
CABL12 – 10M

**Also remember that DMX cable must be daisy chained and cannot be split.**

**Notice:**

- Be sure to follow figures 2 & 3 when making your own cables. Do not connect the cable’s shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR’s outer casing. Grounding the shield could cause a short circuit and erratic behaviour.

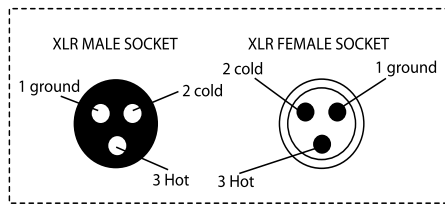




FIGURE 3

XLR Pin Configuration
Pin 1 = Ground
Pin 2 = Negative
Pin 3 = Postive

FIGURE 2

**Special Note: Line termination:**

- When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.

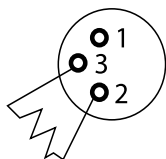

Termination reduces signal transmission problems and interference. It is always advisable to connect a DMX terminal, (resistance 120 Ohm 1/4 W) between pin 2 (DMX-) and pin 3 (DMX+) of the last fixture.

**Using a cable terminator (part number CABL90) will decrease the possibilities of erratic behaviour.**

**5-Pin XLR DMX Connectors:**

- Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-Pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The Chart below details the correct cable conversion.

3- Pin XLR to 5-PIN XLR Conversion		
Conductor	3-Pin XLR out	5-Pin XLR in
Ground shield	Pin 1	Pin 1
Negative (-)	Pin 2	Pin 2
Positive (+)	Pin 3	Pin 3

**Technical Specifications**

**Weight & Dimensions**

- Length.....300mm
- Width.....270mm
- Height.....220mm
- Weight.....6.5kgs

**Power**

- AC input.....240V, 50Hz

**Fuse**

- .....20mm Glass 1A Fast Blow

**Control & Programming**

- Data input.....Locking 3-pin XLR male socket
- Data output.....Locking 3-pin XLR female socket
- Protocols.....DMX-512 UTSITT
- DMX channels.....6